

Operating Instructions

Elite 80 Series

- 1 Seat Fore/Aft Slides**
Towel bar activation: Lift bar and slide seat to desired fore/aft position.
 - 2 Fore/Aft Isolator**
Move to left allows isolation; to right locks isolator.
 - 3 Standard 3-Position Seat Cushion Tilt/Extension**
Lift upward on the front of seat cushion, then push rearward for the upper position. Pull forward and then downward for the lower positions.
 - 4 Premium Comfort Package**
Deluxe 3-position Seat Tilt
Pull upward to the desired seat angle.
 - 5 Deluxe Independent Seat Extension**
Rotate knob upward and extend seat cushion to desired position.
 - 6 Backrest Adjustment – 4-Position Tilt**
Push downward and tilt seat to the desired position.
 - 7 Backrest Adjustment – Recliner**
Pull upward on recliner handle, lean backward to desired position and release handle. To adjust backrest forward, pull upward on recliner handle while leaning forward.
 - 8 ToggleLink Suspension® Adjustment**
Push forward on the front gray rocker switch on the Atlas Control Pod to inflate and raise the suspension. To deflate and lower the suspension, push rearward on the same rocker switch.
 - 9 Mechanical Lumbar Adjustment**
Push rearward to increase lumbar; pull forward to decrease lumbar support.
 - 10 Lumbar Adjustment – Single Chamber Air Lumbar**
Rear-most rocker switch. Push front of switch to inflate lower lumbar bag; push rear of switch to deflate bag.
 - 11 Lumbar Adjustment – Dual Chamber Air Lumbar**
Rear-most rocker switch – lower lumbar bag. Middle rocker switch – upper lumbar bag. Push front of switch to inflate and rear of switch to deflate.
 - 12 Front Armrest Adjustment**
Rotate to set desired angle of armrest.
- Optional**

